


Goodtone




O2 Chair

O2 is a light office chair that innovates to achieve extreme lightness and excellent performance, making concentration a pleasure. It eliminates the interference of complex operations and conforms to the natural rhythm of the body, making every moment of sitting down the beginning of the free flow of inspiration.

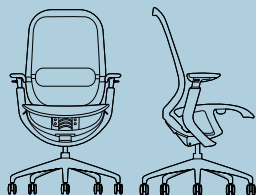

O2


OFFICE
CHAIR

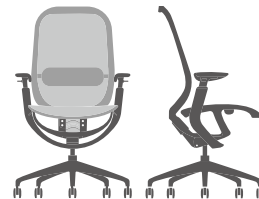


O2

Good design should not be just a high-priced luxury. Goodtone makes good design a high-quality standard that everyone can enjoy.


- | | |
|---|---|
| 1. Upholstery / WINTEX Mesh | 5. Mechanism / One-stage locking chassis |
| 2. Armrest / PA+35%GF+PU Surface | 6. Gas-lift / Steel |
| 3. Backrest / PA+45%GF | 7. Base / 340mm Nylon |
| 4. Seat / PA+45%GF | 8. Caster / 60*25PU |



BLACK




WHITE




PURPLE



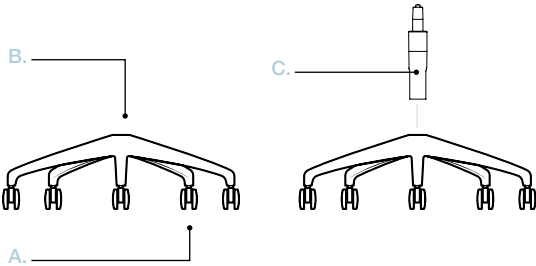


Step 1

Step 2



O2

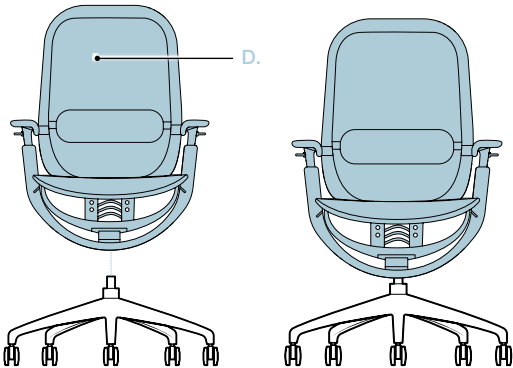

Step 3

Step 4

Height	1030 ~ 1095 mm
Seat depth	600 mm
Seat width	665 mm
Distance from floor to seat	430 ~ 495 mm
Backrest width	445 mm
Distance from seat to the top of backrest	425 mm
Width between armrest	480 mm
Distance from floor to armrest	640 ~ 705 mm
From seat to armrest	210 ~ 280 mm
Tilt angle degree	130°

O2 Functional Description

1 Height adjustment / Control rod on the left hand side of mechanism



To raise the seat, shift your weight to your feet. Engage actuator. Chair will rise automatically. On the contrary, pull the handle and use your body weight to lower the seat

Adjust your feet flat on the ground and bend your thighs to 90 degrees to make your body comfortable and reduce fatigue from sitting for a long time.

3 Tilt lock & Control / right hand side of mechanism



Pull the handle to unlock, tilt to the fixed position and then pull the handle to lock

The tilt angle can be adjusted to suit your personal sitting posture, switch working or resting states to achieve the best comfort experience.

2 2D Movable armrests / Buttons under the armrest pads on both sides



Push-pull armrest pad slides forward and backward



Press the button under the armrest to adjust the height

Proper armrest position can reduce hand and shoulder fatigue.

4 Lumbar control support / Lumbar control behind the seat



Pull up or down the lumbar support by both hand at the same time

Proper lumbar support can reduce discomfort when you sit for long time

Leather office chair: Please gently wipe it with a half-wet sponge dipped with special detergents and service it with the leather servicing agent after wiping it dry with the dry cloth. If it is dipped with water, it should be immediately wiped dry. Besides, avoid the long-time direct sunlight.

Net surface and cloth office chair: Please slap with hand or use the dust collector to clean the dust on it. If there are stains, locally clean and dry it naturally with special detergents.

Armrest, support and chair leg: For aluminum alloy materials, please clean them with a dry cloth or nonferrous metal detergents; For plastic materials, please clean them with half-wet cloth dipped with clear water.

Chair wheel: Clean fur crumbs fiber and other sundries periodically and protect chair wheels with anti-static sprays.

Quality assurance and after-sales service

EIGHT-YEAR QUALITY ASSURANCE

In case the product is damaged due to its quality reasons within eight years from the purchasing date, the Buyer can show the purchasing proof and the Company will repair the product for free.



! Notice

The quality assurance service is not applicable for the improperly stored, assembled and used product, and does not include the damage to the product due to the normal abrasion and tearing, cutting and scraping or striking or accidents.



After opening the package of the product, please carefully check the product for part lack or transportation damage. If any, please contact the dealer timely.



Please place it on the indoor stable floor and prevent it from fire or exposure to blazing sun for a long time and humid environment.



The product can only be used by one person.



Please do not seat at the edge of the chair.



Please do not step on it or stand on the product to get something.



Please do not incline the chair backrest excessively.



Please do not lean against the product except in normal sitting posture to avoid tumbling due to the unbalance.



Please prevent the product from scratching or striking by sharp or hard tools.



Please notice the spontaneous loose phenomenon of bolts. If any, please stop using and repair the product immediately.

